

## Installation of EPC-001

As per below diagram:

1. EPC-001 bi-directional Wattmeter is installed after the customer's main switch .
2. The meter sends power level and direction data to the inverter.
3. The inverter settings are entered for "Power Balance" Watts to limit export to the required level.
4. The net effect is that the solar system becomes an "appliance in reverse" see TN073 for details.

